

Avenger GX Mobile Programming Line Converter

Converts RS232 data levels to TTL data levels, (0v and +5v). A ground is applied to the "program in" pin. Also jumpers the external speaker lines, pins 3 and 4, together to connect the speaker.

Power, B+ and ground, is supplied by the radio on pins 1 and 2.

- 1 ground
- 2 DC 12v
- 3 \ external speaker, 3 jumpered to 4
- 4 / external speaker
- 5
- 6
- 7
- 8
- 9 DI program data
- 10 DO program data
- 11 program in
- 12
- 13
- 14
- 15

