

MT6000E TEST MODE (MASC and non-MASC models)

To Check the display, the buttons, and the switches, perform the following tests:

- (a) Turn radio on.
- (b) After the self test is complete, press the bottom button (side button 3, SB3) five times in succession, within 10 seconds; model and serial number will scroll on display.
- (c) After "RF TST" appears on the display, press the blue button (SB1), "CH TST" appears on the display.
- (d) Next, press and hold the orange button on top of the radio; all segments of the display will light, and the LED on the control top will illuminate a yellowish colour.
- (e) Release the orange button; "03/000" appears, which indicates that the switch is in the open condition.
- (f) Press the orange button again; "03/001" appears, which indicates that the switch is in the closed condition.
- (g) Rotate the channel change knob; "04/000" thru "04/015" appears.
- (h) Rotate the concentric switch; "65/000" and "65/001" appears.
- (i) Rotate the volume control; "02/000" thru "2/255" appears and radio beeps in unison.
- (j) Press SB1 (blue), view "96/001"; release, view "96/000".
- (k) Press SB2 (middle), view "97/001"; release, view "97/000".
- (l) Press SB3 (bottom), view "98/001"; release, view "98/000".
- (m) Select "A" on toggle switch; view "64/000".
- (n) Select "B" on toggle switch; view "64/001".
- (o) Select "C" on toggle switch; view "64/002".

To exit test mode, turn the radio off then back on.

