
## Important Information

Caution: Failure to attach the keyboard cable to the external drive will result in the external drive lacking enough power to operate properlycausing damage to the CompactFlash card.

## Connect the CompactFlash\* External Drive to the Parallel Port and Keyboard of Your Computer

The external drive allows you to transfer the MP3 or G2 files to the CompactFlash card. Attach it to your computer *as shown* 

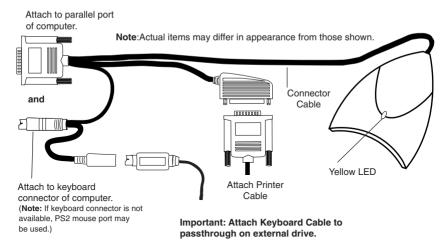

Follow the computer shutdown procedure, and turn off your printer and any parallel port device(s). Remove any printer cable (or other device cable) attached to your parallel port. Attach the external drive cables to the parallel port and keyboard connector of your computer. Make sure to attach the keyboard cable to the external drive keyboard cable passthrough.

Refer to the Owner's Manual for detailed information on installing and using the external hard drive, Lyra<sup>TM</sup> Player, and software.

<sup>\*</sup>CompactFlash is a trademark of SanDisk Corporation